

cnPilot™ r190 Home & Small Business Wireless Router

Quick Start Guide




This Quick Start Guide assists you to quickly connect and configure Cambium cnPilot r190. To learn more about Cambium cnPilot Home & Small Business Wireless Router and for detailed configuration information, see *Cambium cnPilot Home & Small Business Wireless Router User Guide*.

Package Contents

- cnPilot r190 Home & Small Business Wireless Router (Qty.1)
- Power Adapter 12V/1A (Qty.1)
- RJ45 Ethernet cable (Qty.1)
- ATA Analog phone connector (Qty.2, cnPilot r190V only)

Power ON the wireless router using the power supply.

- POWER LED will glow after 5 seconds of powering ON and wait for 2 minutes to boot up the device properly.
- Connect an Ethernet cable from your computer to any RJ45 LAN port on cnPilot r190.
- LAN LED will turn ON after connecting the LAN cable.
- Connect the WAN port of the wireless router to the ISP device (E.g. ADSL, Cable Modem). The WAN LED will start glowing now.

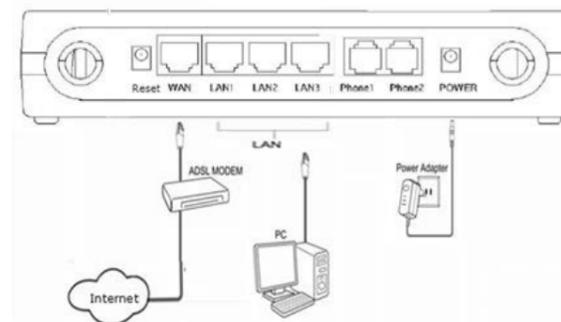


Configure the LAN interface of your PC to acquire the IP address using DHCP.

The LAN interface of the PC will get an IP address from the 192.168.11.x/24 subnet.



IP Address Configuration


Select these options **Use the following IP address** and **Use the following DNS server addresses** to obtain IP address and DNS server addresses automatically.

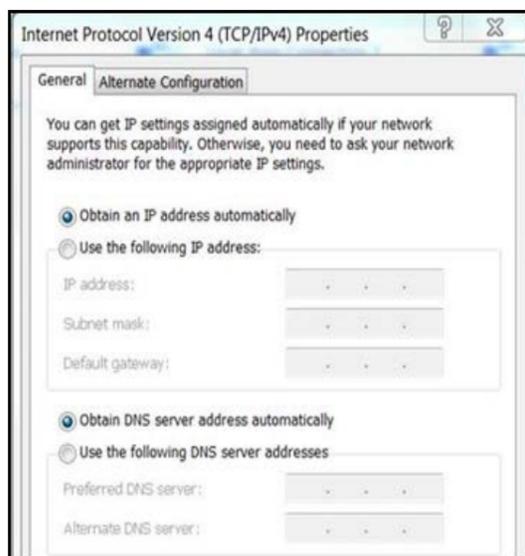

- Connect to the wireless router by typing <http://192.168.11.1> in web browser.
- Enter the default username as **admin** and password as **admin**.
- Change the default password by navigating to **Administration > Management > Password Reset** option.





- The default **WAN IP Mode** is DHCP. Please refer your ISP's instructions to use other modes if required, as shown below.

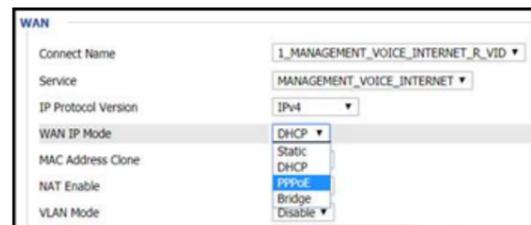

- Navigate to the **wireless** tab and change the SSID name.
- For selecting the security password for SSID, navigate to **Wireless > Wireless Security** and select the SSID from SSID drop-down list, and select the security type and password.

Note: It is recommended to change the wireless security password.

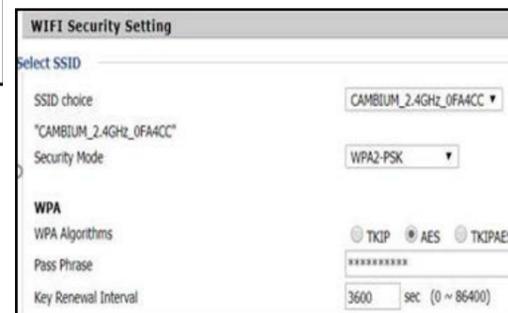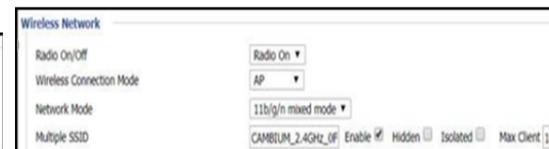

- Save the configuration and reboot the device.

- To view the connection status:
 - Login to <http://192.168.11.1>
 - Navigate to **STATUS** tab and check the **Network Status** for details of internet connectivity and statistics.

For more information, please refer <https://support.cambiumnetworks.com/files/r-series/>.

